

## Main/Reserve Switch (Optional)



### Description

The “Main” to “Reserve” switch is used with systems that incorporate main and reserve (back-up) agent storage. The switch may utilize 1 or 2 Form “C” Contact blocks which will provide an electrical path to either the “Main” or “Reserve” releasing modules.

Following a system discharge, reset any field devices. Once all devices are in a stand-by status the Main-Reserve Switch may be moved to the “Reserve” position. The Control Panel may then be reset to a normal mode for uninterrupted SFFECO protection. The empty “main” containers can be removed for recharge. After the containers in the “Main” system have been recharged, the switch may be returned to the “Main” position.

The switch may be mounted to a standard 4” electrical box or others.

### DIMENSIONS

Width	105 mm
Height	105 mm
Depth	75 mm

